NX2 - Headlight Interface Harnesses

NX280

Product Information

Description	Volkswagen - Amarok (2011 On) with factory headlights (10 PIN)
Shipping Weight	0.1514576 lbs / 0.07 kgs



Product Dimensions

Copyright © 2026 Invision Sales Pty. Ltd.



Additional Specifications


Warranty	3 Years
Pack Quantity	1

Copyright © 2026 Invision Sales Pty. Ltd.

Installation & Application Information

INSTALLATION

1. Pick the headlight with the best rear access.
2. Disconnect the OEM power plug from the back of the headlight.
   Note: If you are struggling to locate it, the plug should look almost identical to the connection on the Noxsolis interface harness.
3. Connect the Noxsolis interface harness to the headlight using the MALE connection plug.
4. Connect the OEM power plug into the FEMALE connection plug of the Noxsolis interface harness.
5. The third, smaller plug on the harness is used to connect into any of the Noxsolis wiring harness kits.

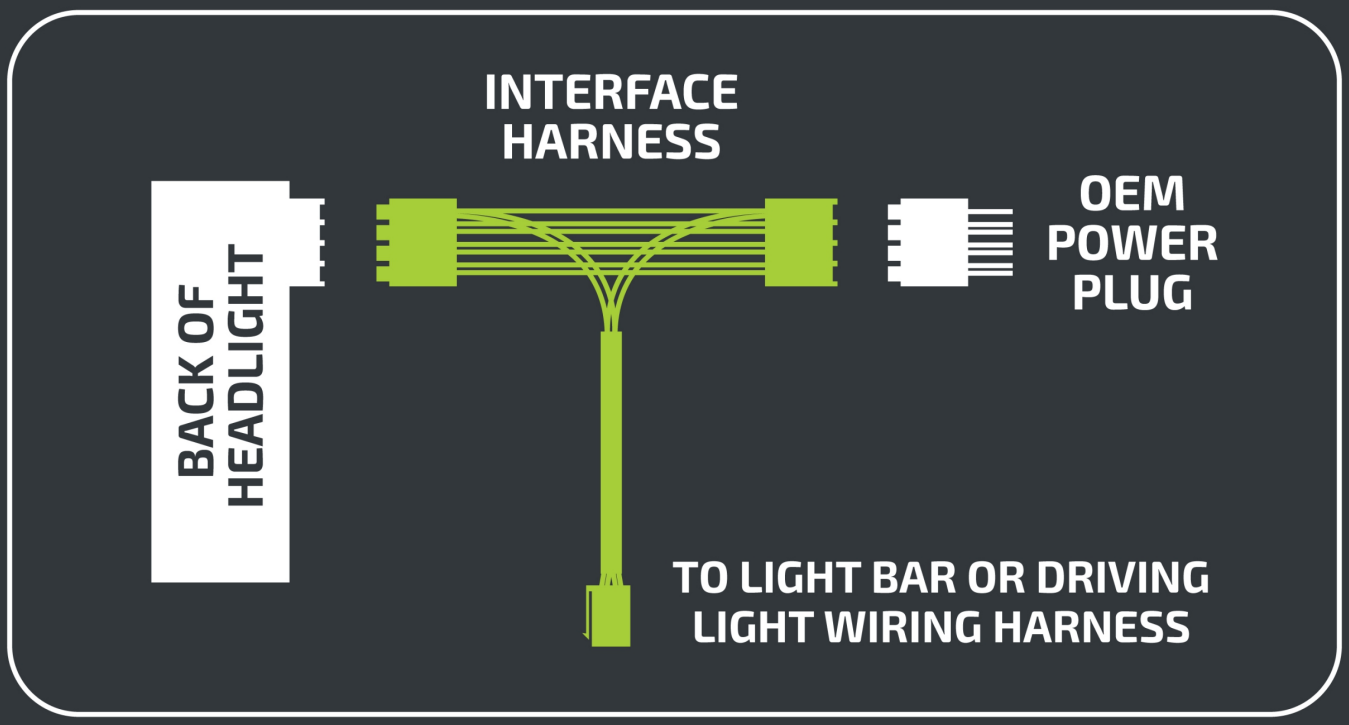

Copyright © 2026 Invision Sales Pty. Ltd.