

Headlight Restoration - Trade HRK05TP

Product Information

Description


Headlight Restoration Kit - Trade Pack for Mild Damage (10 Vehicles)

Additional Information

HRK05TP Pack Contents Yellow-X applicator sachet x 20 UV Clear Coat applicator sachet x 20 Blue microfiber towel x 1 Protective gloves x 10



Photometric Specifications

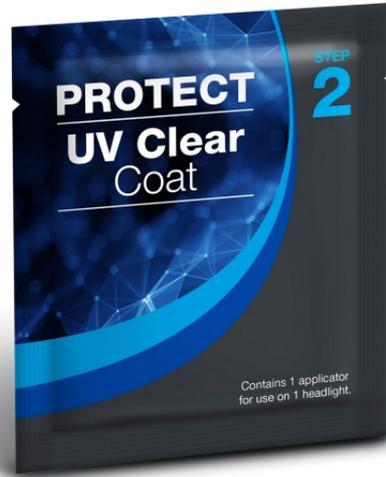

Additional Specifications



Pack Quantity

1 Kit - Services 10 Vehicles



Yellow-X Cleaning Instructions

- Using the Yellow-X applicator, clean the surface of the headlight by rubbing vigorously to ensure all dirt and grime is removed.
- Wash off the Yellow-X with water.
- Thoroughly dry the lens with the supplied blue microfiber towel.
- It is imperative that the surface is completely dry before moving on to the next step.

UV Clear Coat Instructions

- Wear the supplied protective glove to prevent the UV Clear Coat making contact with your skin.
- Using the UV Clear Coat applicator, start at the top of the lens and work your way down, wiping from one side to the other.
- Apply a generous amount of UV Clear Coat as the lines from wiping will self-level.
- Allow at least 1 hour drying time in warmer conditions and even longer in cooler conditions.
- UV Clear Coat may be cleaned off surrounding surfaces using rubbing alcohol.